 


MOMENTUM ASSEMBLY MANUAL

PARTS OF THE CHAIR

1 Backrest

A x 1



2 Armrests

B x 2



3 Seat Cushion

C x 1



4 Gas Lift Cylinder

D x 1



5 Wheels

E x 1



 
6 Base

F x 1



7 Tilt Mechanism

G x 1



8 Headrest Assembly

H x 1



9 Side Covers

I x 2



10 M6x20 Screws

J x 4
M6x20



11 M6x35 Screws

K x 10
M6x35



12 M6x40 Screws

L x 2
M6x40



13 Allen Key

N x 14



14 Washers

M x 1



HOW TO ASSEMBLE THE CHAIR


ASSEMBLY STEPS

Step 1: Attach Tilt Mechanism to Seat

Place the tilt mechanism (G) underneath the seat cushion (C). Align the screw holes and secure the mechanism using:

- 4 × M6×20 screws (J)
- 4 × washers (N)

Tighten all screws securely using the provided Allen key.

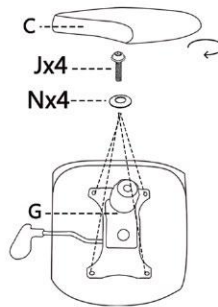


Step 2: Attach Backrest to Seat

Align the backrest (A) with the seat frame. Install the side covers (I) on both sides of the backrest connection area.

Secure the backrest using:

- 4 × M6×35 screws (K)
- 4 × washers (N)

Tighten all screws properly to ensure the backrest is firmly attached.

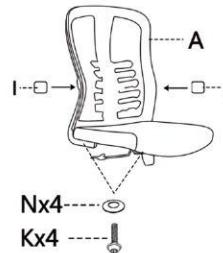


Step 3: Install Fixed Armrests

Attach both fixed armrests (B) to the sides of the seat assembly.

Secure the armrests using:

- 6 × M6×35 screws (K)
- 6 × washers (N)

Tighten all screws properly to ensure the armrests remain stable.

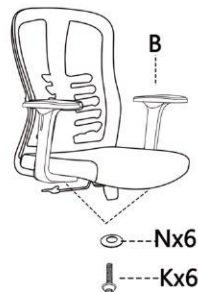


Step 4: Assemble Base and Wheels

Insert the wheels (E) into the base (F).

Push each wheel firmly into the base slots until fully secured.

Insert the gas lift cylinder (D) into the centre of the base.

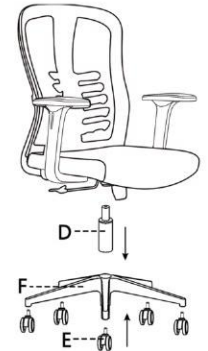


Step 5: Install Headrest

Attach the headrest assembly (H) to the top of the backrest.

Secure it using:

- 2 × M6×40 screws (L)

Tighten the screws properly and ensure the headrest is stable.

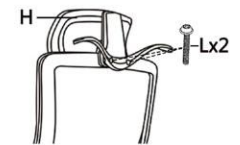

Step 6: Connect Chair Body to Base

Place the assembled chair body onto the gas lift cylinder.

Press down firmly to secure the connection between the chair body and base.

Your Boost Momentum chair is now fully assembled.



INSTRUCTIONS

ADJUSTMENT INSTRUCTIONS

Seat Height Adjustment

Use the adjustment lever located under the seat to raise or lower the chair height.
Adjust the height according to your preferred sitting position.

Headrest Positioning

Adjust the headrest position manually to provide comfortable support for your head and neck.

SAFETY INSTRUCTIONS

- Ensure all screws are properly tightened before using the chair.
- Do not exceed the recommended weight capacity of the chair.
- Do not stand on the chair or use it for purposes other than sitting.
- Avoid placing excessive pressure on the armrests.
- Regularly check screws and moving parts to ensure they remain secure.
- Use the chair only on a stable and flat surface