

PRISM ASSEMBLY MANUAL

PARTS OF THE CHAIR

1 Seat Cushion

A x 1




2 Armrests

B x 2




3 Backrest

C x 1

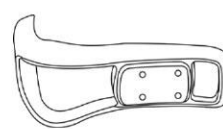


4 Mechanism

D x 1

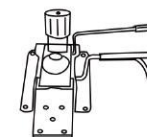

5 Back Cushion & Headrest

E x 1

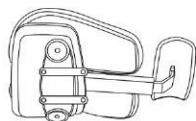


6 Gas Lift Cylinder

F x 1



7 Base

G x 1



8 Wheels

H x 5



9 Back Cover

I x 1



10 M6x40 Screws

K x 10
M6x40,S5



11 M8x40 Screws

L x 3
M8x40,S5



12 M6x20 Screws

M x 4
M6x20,S5



13 Washers

N x 10



14 Allen Key

O x 1
S5



HOW TO ASSEMBLE THE CHAIR


ASSEMBLY STEPS

Step 1: Attach Armrests to Seat

Place the armrests (B) on both sides of the seat cushion (A).
Align the screw holes and secure the armrests using:

- 6 × M6×40 screws (K)
- 6 × washers (N)

Tighten all screws properly using the provided Allen key.

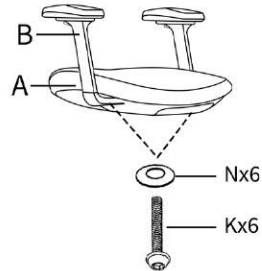


Step 2: Attach Mechanism to Seat

Place the mechanism (D) underneath the seat cushion.
Align the mounting holes and secure the mechanism using:

- 4 × M6×40 screws (K)
- 4 × washers (N)

Ensure the mechanism is firmly attached before continuing.

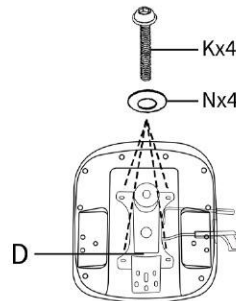


Step 3: Attach Backrest to Seat

Align the backrest (C) with the rear mounting bracket of the seat.

Secure the backrest using:

- 3 × M8×40 screws (L)

Tighten all screws securely to ensure the backrest is stable.

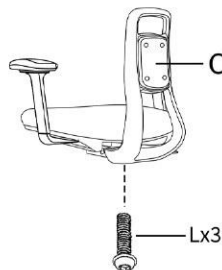


Step 4: Install Back Cushion & Headrest

Attach the back cushion and headrest (E) to the backrest.
Align the mounting holes properly and secure the assembly using:


- 4 × M6×20 screws (M)

Tighten all screws securely using the provided Allen key.

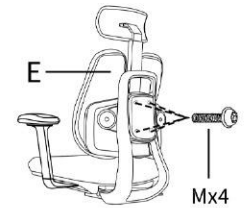

Step 5: Install Back Cover

Attach the back cover (I) to the rear side of the backrest.
Ensure the cover is properly aligned and fitted.

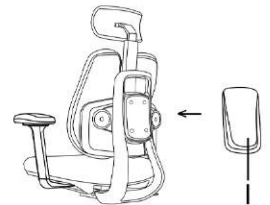


Step 6: Assemble Base and Wheels

Insert the wheels (H) into the base (G).

Push each wheel firmly into the base slots until fully secured.

Insert the gas lift cylinder (F) into the centre of the base.

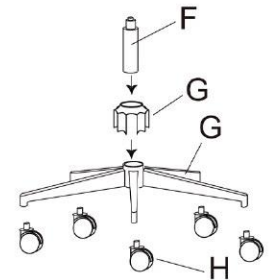

INSTRUCTIONS

Step 7: Connect Chair Body to Base

Place the assembled chair body onto the gas lift cylinder. Press down firmly to secure the connection between the chair body and base. Your Boost Prism chair is now fully assembled.



Armrest Adjustment

Adjust the armrests according to your preferred arm position for improved comfort while working or relaxing.

Headrest Adjustment

Adjust the headrest position to provide comfortable support for your head and neck.

ADJUSTMENT INSTRUCTIONS

Seat Height Adjustment

Use the adjustment lever underneath the seat to raise or lower the chair height according to your preferred sitting position.

Recline Adjustment

Use the side lever to unlock the backrest recline function. Adjust the backrest angle according to your preferred sitting position and lock it into place.

Seat Sliding Adjustment

Adjust the seat depth forward or backward to achieve better thigh support and a more comfortable sitting posture.

SAFETY INSTRUCTIONS

- Ensure all screws are properly tightened before using the chair.
- Do not exceed the recommended weight capacity of the chair.
- Do not stand on the chair or use it for purposes other than sitting.
- Avoid placing excessive pressure on the armrests.
- Regularly check screws and moving parts to ensure they remain secure.
- Use the chair only on a stable and flat surface