

KINETIC ASSEMBLY MANUAL

PARTS OF THE CHAIR

1 Wheels

A x 5



2 Base

B x 1



3 Gas Lift Cylinder

C x 1



4 Backrest

D x 1



4 Seat Cushion

E x 1



6 Mechanism

F x 1



7 Armrests

G x 2



8 Headrest

H x 1




9 Lumbar Massage Module

I x 1




10 (6x40)MM Screws

J x 6



11 (6x45)MM Screws

K x 4



12 Washers

L x 10



13 (8x40)MM Screws

M x 3




14 Allen Key

N x 1




15 USB Charging Cable

O x 1



16 (6x14)MM Screws

P x 2



17 Base Cover

Q x 1




HOW TO ASSEMBLE THE CHAIR

ASSEMBLY STEPS


Step 1: Assemble Base

Insert the wheels (A) into the base (B).
Insert the gas lift cylinder (C) into the centre of the base.
Attach the base cover (S) onto the gas lift cylinder.
Ensure all components are properly secured before proceeding.

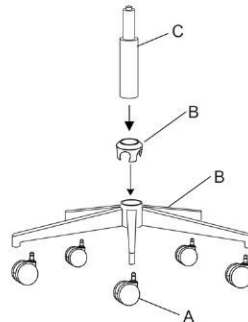


Step 2: Attach Armrests

Attach both armrests (G) to the seat cushion (E).
Secure the armrests using:
• 6 × (6×40)MM screws (J)
• 6 × washers (L)
Tighten all screws securely using the provided Allen key.

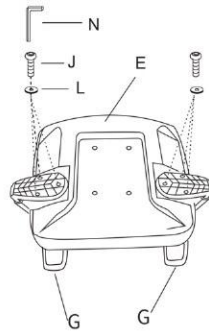


Step 3: Install Mechanism

Place the mechanism (F) underneath the seat cushion (E).
Secure the mechanism using:
• 4 × (6×45)MM screws (K)
• 4 × washers (L)
Ensure the mechanism is aligned correctly before tightening all screws.

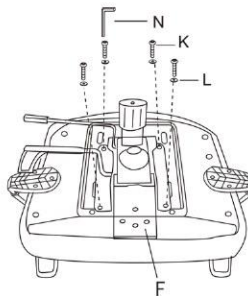


Step 4: Install Lumbar Massage Module

Attach the lumbar massage module (I) onto the backrest (D).
Secure it using:
• 2 × (6×14)MM screws (P)

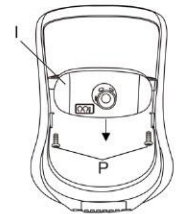

Step 5: Attach Backrest

Align the backrest (D) with the seat cushion.
Secure the backrest using:
• 3 × (8×40)MM screws (M)
Tighten all screws properly to ensure the backrest is firmly attached.

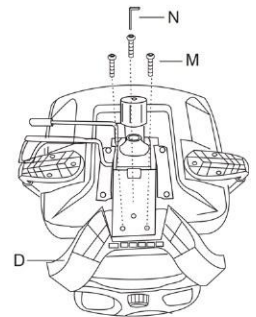

Step 6: Attach Headrest


Install the headrest (H) onto the backrest (D).
Ensure the headrest is properly aligned and securely fitted.



HOW TO ASSEMBLE THE CHAIR

Step 7: Connect Chair Body to Base

Place the assembled chair body onto the gas lift cylinder. Press down firmly to secure the chair body with the base. Your Boost Kinetic chair is now fully assembled.

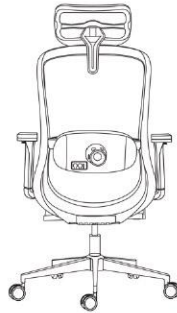

2D LUMBAR MASSAGE USER MANUAL

Power & Speed Adjustment Button


Power On/Off:

Press and hold the button for 3 seconds to activate or deactivate the massage function.

Speed Adjustment:

During operation, briefly press the button to cycle through three massage speed levels.


The massage direction automatically changes when switching between speed levels.

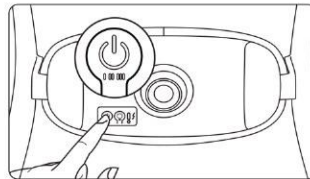

LED Light Button

Briefly press the LED button to turn the decorative LED light on or off during operation.

The LED light is designed for decorative purposes only.

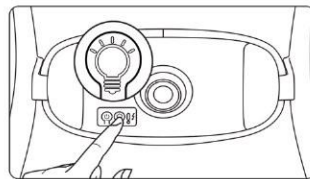

Charging Instructions

Battery:

Built-in 2000mAh rechargeable battery.

Charging:

Use a 5V/2A Type-C charger.


Charging Duration:

Approximately 3 hours for a full charge.

Charging Status:

Red light indicates charging.


Green light indicates the battery is fully charged.

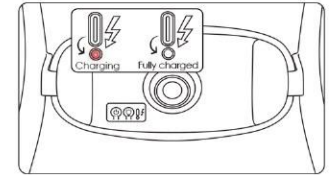

Lumbar Depth Adjustment

Rotate the adjustment knob left or right to adjust the massage depth.

Adjust the depth during operation to find your preferred massage intensity.

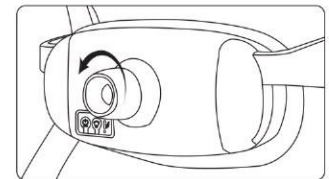



Lumbar Height Adjustment

To Raise:

Lift the massage module upward using both hands until it reaches the desired position.

To Reset:


Press the massage module downward until it reaches the lowest position.

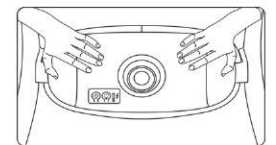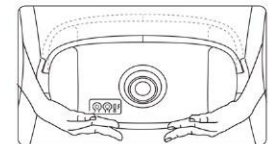

Usage Cycle & Time

The massage function operates for 15 minutes per session.

A full charge provides approximately 5 to 6 massage sessions depending on usage conditions.

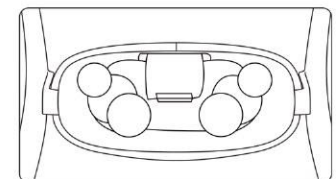

INSTRUCTIONS

ADJUSTMENT INSTRUCTIONS

Seat Height Adjustment

Use the lever underneath the seat to raise or lower the chair height according to your preferred sitting position.

Recline Adjustment

Use the side lever to adjust the backrest recline angle. Lock the chair at your preferred position for comfortable working or resting.

SAFETY INSTRUCTIONS

- Ensure all screws are properly tightened before using the chair.
- Fully charge the massage module before first use.
- Do not use the massage function while charging.
- Do not exceed the recommended weight capacity of the chair.
- Do not stand on the chair or use it for purposes other than sitting.
- Regularly check screws and moving parts to ensure they remain secure.
- Use the chair only on a stable and flat surface